

volkano

MINI BAZOOKA SERIES

INSTRUCTION MANUAL



PLEASE READ AND RETAIN THIS INSTRUCTION
MANUAL FOR FUTURE REFERENCE.

HIGHLIGHTS:

- Outdoor Passive Bluetooth Speaker.
- Explosive bass and crystal clear sound.
- A2DP Bluetooth allows music streaming from any Bluetooth-enabled device such as a mobile phone, tablet or computer.
- Secure simple pairing.
- 10m operating range.
- Supports USB.
- FM Radio.
- Line-In Function/ Aux-in 3.5mm Jack. Suitable for PC, Tablet, TV and other audio devices.
- Double function buttons: backward/volume down and forward/volume up.
- Built-in lithium rechargeable battery 1500mAh.
- Lanyard included for easy carrying.


ACCESSORIES:

- Charging cable
- Audio cable,
- User manual
- Lanyard.

TECHNICAL SPECIFICATIONS:

Bluetooth Version	: 2.1 Supports A2DP and AVRCP Profile
Bluetooth Range	: up to 10 meters
Speaker	: Size – 2.5 inches Output – 6W, 4Ω
Frequency Response	: 100 ~ 20kHz
Connections	: USB Port, Aux-in 3.5mm jack
Power Supply	: Built-in rechargeable lithium battery 1500mAh (3 hours playtime with max volume)
Recharge Power	:DC 5V 1A (USB-to-micro USB charging cable included)
Product Size	: ø98 x 228.5mm
Accessories	: Charging cable, Audio cable, User manual & Lanyard.

DESCRIPTION OF PARTS

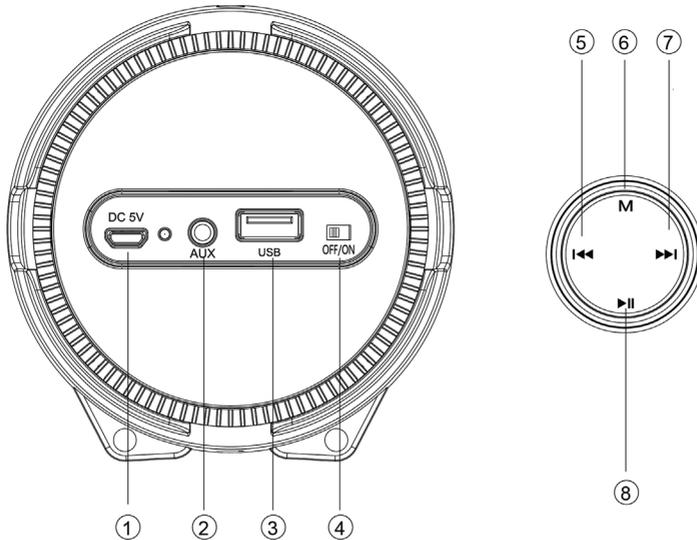

1. Charging jack
2. Aux-in jack
3. USB port
4. ON/OFF Switch
5. Backward/Volume Down
6. Mode (Switch between Bluetooth, USB flash disk, FM Radio and Aux-In)
7. Forward/Volume Up
8. Play/Pause and FM Radio Channel Auto Search

BLUETOOTH:

1. Turn the power button "ON". The LED light will flash blue and beep twice.
2. Activate Bluetooth on the mobile phone/device and search for device "Mini Bazooka" then connect. The blue LED light will flash and will beep three times once connected successfully.
3. You can now play music from your device.
4. Music tracks can be selected either by the control buttons on the Speaker or via the connected device. Press "backward" or "forward" button on the Speaker or mobile phone to select songs you would like to play.
5. Press "play/pause" on the speaker or mobile phone to play and stop the music.
6. Volume can be controlled on the speaker by pressing and holding the "backward" or "forward" buttons. For volume up, press and hold the "forward" button. For volume down, press and hold the "backward" button.

PLAYING MUSIC FROM USB DISK:

1. Turn the power button “ON”.
2. Insert USB flash disk into the slot, the blue LED light will flash. The music stored will be played automatically.
3. Music can be controlled with the control buttons on the Speaker.
4. Turn the power button “OFF”, when not using the Speaker.

NOTE: In Bluetooth mode, inserting a USB flash disk will disconnect the Bluetooth and switch to playing from the USB flash disk. Press mode “M” to switch back to Bluetooth mode.

FM RADIO:

1. The audio cable is to be used as an antenna. When using FM mode, ensure the audio cable is plugged into the speaker to receive FM radio signal.
2. Once the device has been turned on, press the mode “M” button to switch to FM radio mode.
3. Use the play/pause button to search for all available FM channels and store them automatically.
4. To navigate through channels, use the forward and backward buttons.

NOTE: Inserting the audio cable while the speaker in on FM mode, will cause the speaker to automatically switch to Aux mode. Pressing the mode “M” button again will change back to FM mode.

HOW TO CHARGE:

1. Switch the speaker "OFF". A micro USB charging cable has been provided. Plug the cable into the speaker (DC 5V socket) and into a USB port on a computer or 5V USB adaptor (not included). The red charge indicator will light up indicating that the speaker is charging.
2. When charging while the speaker is on, 2 lights will flash, red and purple indicating that the speaker is on while charging. Please note that using the Speaker while charging it will lengthen the required charge time.
3. Charge time should be 3-5 hours. When fully charged, the red LED indicator light will switch off.
4. In order to prolong the battery life, do not charge for more than 8 hours.

NOTE:

1. The speaker will operate without the wired connection using the lithium battery. The amount of battery life depends on how often the Speaker is used, and how media is played. IE; heavy music, high volume and excessive bass music will use more battery power than spoken word.
2. The built-in rechargeable battery is not replaceable. Do not remove or replace it, and please dispose of in an environmentally friendly manner.
3. When cleaning the product, use a soft dry cloth. For more severe stains, pleaseampen the cloth with water only.

CARE & MAINTENANCE:

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as benzene, thinners or similar materials can damage the surface of the unit.

WARNINGS:

- The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
- The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- Do not use attachments not recommended by the product manufacturer.

DISPOSAL OF UNIT



- Please do NOT attempt to change the battery yourself. If the battery has died and you do not want us to replace your battery, you should follow the disposal instructions below:
- Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices.