

volcano


FIT SERIES



Features:


- Step Counter
- Easy to read display
- Splash proof
- Wear and go

Identifying Parts:

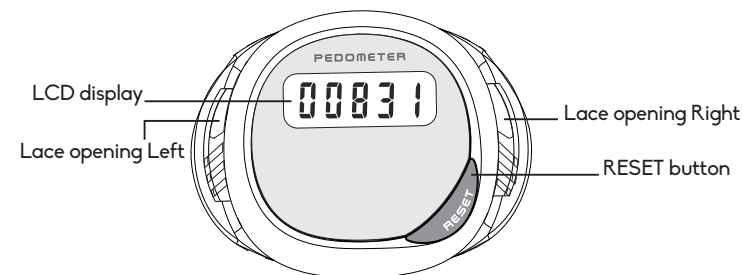


Fitting the unit:


- Loosen the top 2 holes of your shoe lace, both on the left and right side of your shoe.

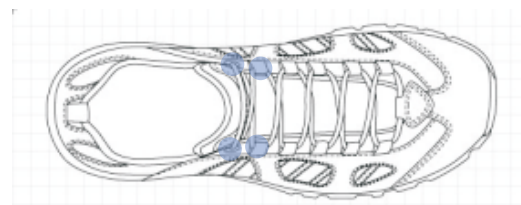


- Thread the laces through the 2 lace openings of the pedometer. Ensure that the laces thread through from the top to the bottom as shown below.

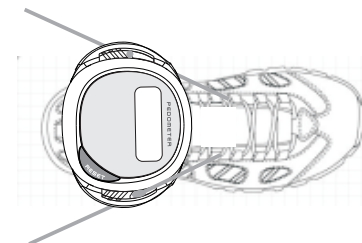

- After threading the laces through the pedometer, tie up the rest of your shoe and then tighten to your preference. You are now ready to effectively use the pedometer.

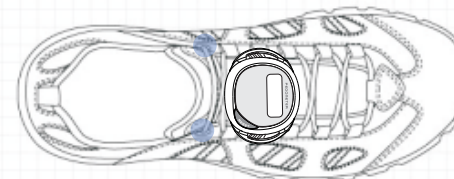

- Correct position attachment of pedometer on shoe.

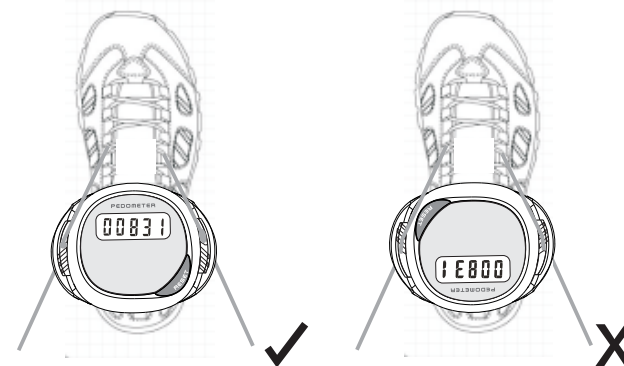

Using the Pedometer:

- Press and hold the "Reset" button for 2 seconds to reset the counter to "00000".
- You can now start using the pedometer. Your steps will be counted as you start walking or running.
- Once the pedometer reaches the maximum value "99999", it will start all over again at "00000" and continue counting.

Automatic Off:

If no motion is detected for 2 minutes, the unit will automatically shut down. The pedometer will retain memory of the last value, then resume once motion has been detected.

Specifications:

Power Source: 1.5V, AG-10
Product Size: 48 x 38 x 20mm

SHOE PEDOMETER

VK-5004-WTGR

Please read and retain these instructions for future reference.